

Lucky Miner(V5-V8) User Guide

1. One set of products includes a 5V 4A power adapter, a Lucky Miner.
2. As the picture below, connect the power adapter to the 110V-220V socket and the Lucky Miner.




3. Setting

3.1 Waiting for 1 minute, you can find an open WiFi named Lucky-****, connect it to computer or mobile phone. See pic 1.

3.2 Jump to Lucky Miner interface. Select Settings and input your WiFi name, password, Pool address, Port number, Wallet address. After setting, Save and then Restart.


Mobile phone setting see pic 2 and pic 3.

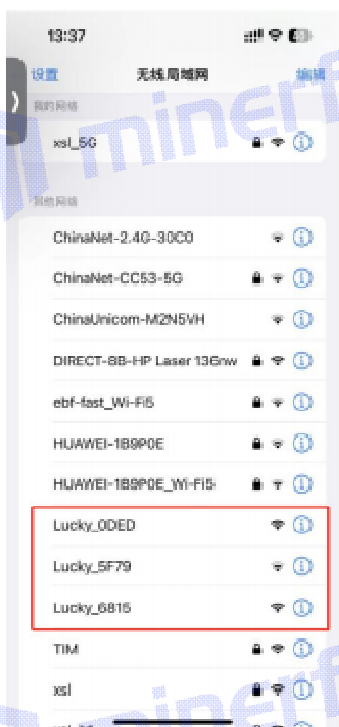

pic 1




pic 2

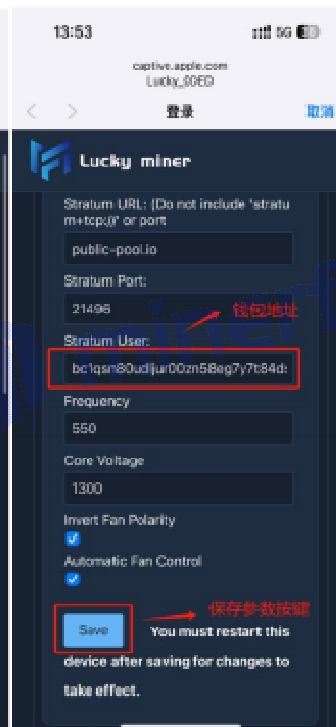


pic 3


Computer setting see pic 4, pic 5 and pic 6.

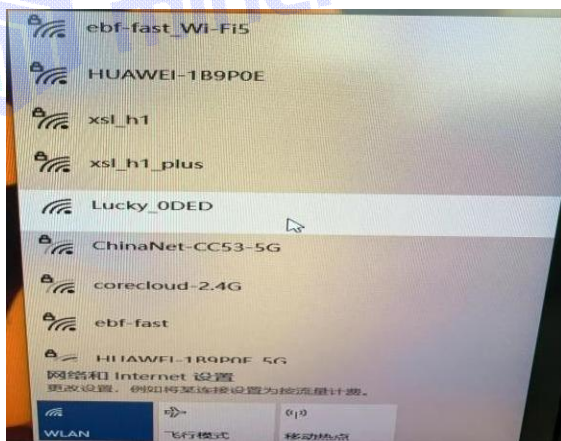

pic 4

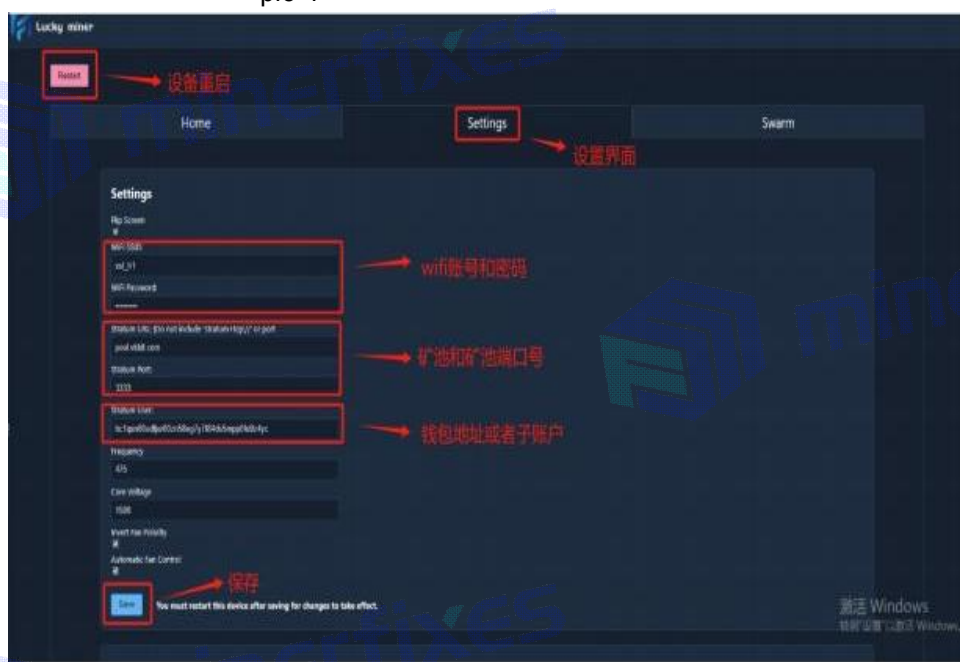

pic 5

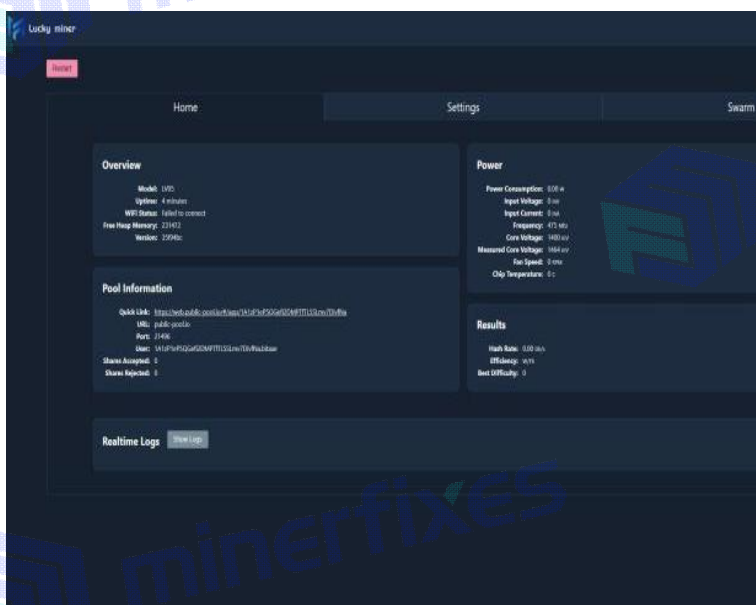


Pic 6

3.3 The screen of Lucky miner shows the real time hashrate, power efficiency, hash time, and IP address etc. See pic 7 and pic 8.



pic 7

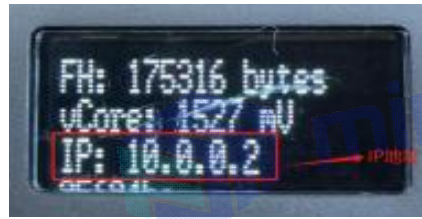

pic 8


4. Reset

Close the router and wait for about 1 minute, and the WiFi of Lucky_**** will display.

Reset.

5. Pool Checking

Open website <https://www.vkbit.com/>, input your wallet address, and check the mining status.

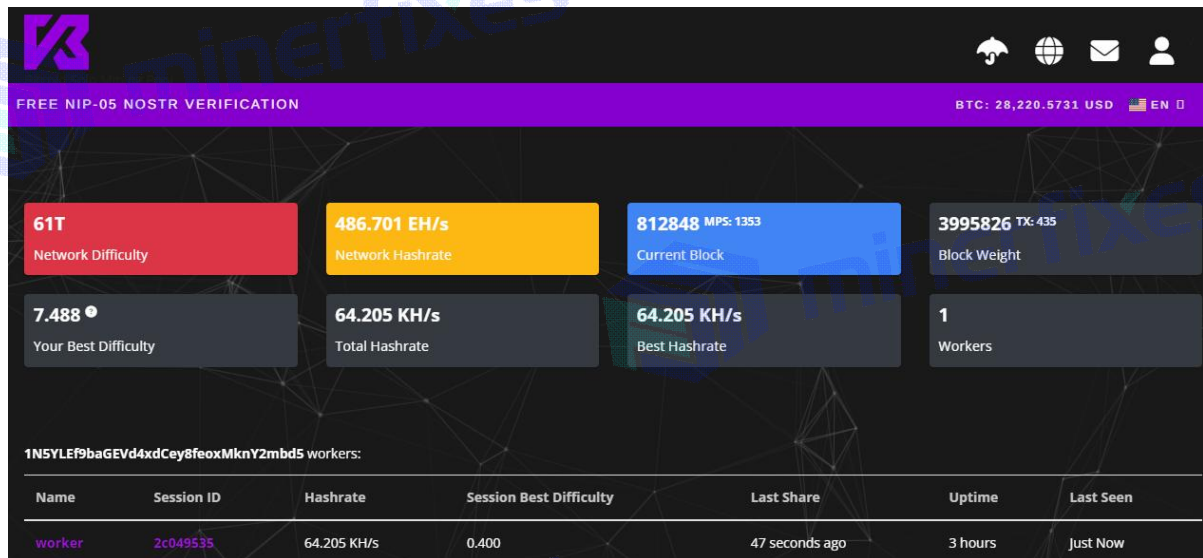

6. Pool Recommendation.

No.	Pool URL	Port	Web
1	Pool.vkbit.com	3333	https://vkbit.com
2	Pubilc-pool.io	21496	https://web.public-pool.io
3	Pool.tazmining.ch	33333	https://tazmining.ch/#btc2
4	Solo.ckpool.org	3333	https://solo.ckpool.org
5	Btc.zsolo.bid	6057	https://zsolo.bid/en/btc-solo-mining-pool
6	Eu.stratum.slushpool.com	3333	https://braiins.com/pool
7	btc.luckymonster.pro	7112	https://luckmonster.pro
8	Btc.millpools.cc	4567	https://millpool.cc/btc-pool
9	Stratum.solomining.io	7777	https://btc.molepool.com
10	Aminingpool.com	3004	https://amingpool.com/#btc
11	Pool.mynewmining.com	3333	https://pool.mynewmining.com/#btc2